



# Action Cam i30 QUICK START GUIDE

## Packing Details - 1




i30 Action Cam




Waterproof Housing




Additional Skeleton Backdoor

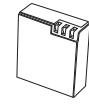


Rechargeable Battery

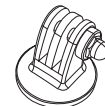


1/4" Tripod Mount Adapter

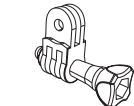

Switch Support 1

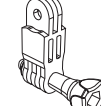


Switch Support 2

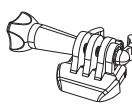


Quick Release Buckle


## Packing Details - 2

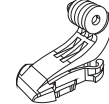

Vertical Quick Release Buckle

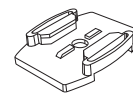

Curved Adhesive Mount

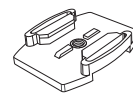


Flat Adhesive Mount



3M Adhesive Sticker x2



USB Cable

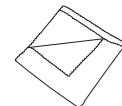

Wiper




Quick Start Guide



Cloth Bag

## The Appearance

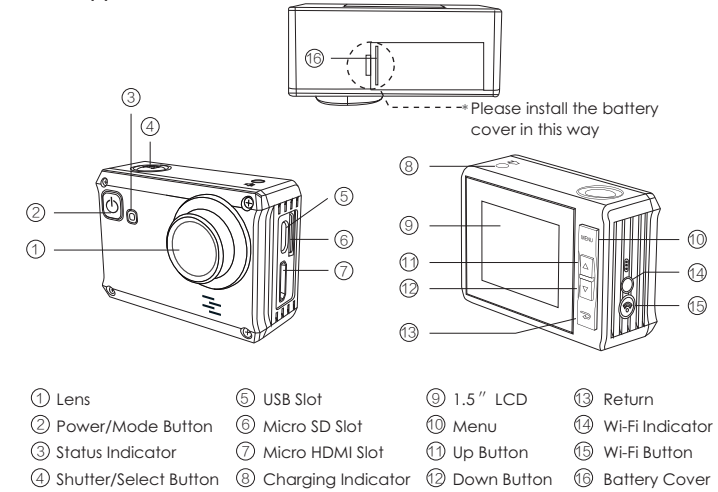

## Connect Your Smartphone to Camera

- 1 Download ThiEYE App. Please scan the QR code on the packaging to download ThiEYE App, or download from our official website [www.thieye.com](http://www.thieye.com).
  - 2 Hold UP/Wi-Fi Button for 2-3s, the LCD will show 'Waiting for WiFi Connection...!'
  - 3 Connect your smartphone to Wi-Fi Network (Name: ThiEYE\*i30, Password: 1234567890), then open the App and click the "CONNECT" button.
  - 4 View and control your camera on smartphone via App.
- Operating system support: Windows 7/Vista/XP

## Basic Operation

- 1 Charge the camera  
Connect the camera with power plug or PC via USB cable, the charging indicator remains blue while the battery is charging, and the charging indicator will turn off when the battery is fully charged.
- 2 Insert Micro SD card  
Insert a Micro SD card. (Class 10 or UHS-I required, sold separately.)
- 3 Turn on/off the camera  
Hold the Power/Mode Button "⏻" for 2-3s to power on/off the camera.
- 4 Mode Switching  
Repeatedly press Power/Mode Button "⏻" to switch mode, there will be modes: Video, Photo, File.
- 5 Video and Photo  
◆ Video Recording: Choose Video Recording mode, press Shutter/Select Button "📸" to turn on/off. There will be a red dot flash on the screen, and the blue status indicator

will flash during recording. (\*When you record videos via App control, the screen will automatically turn off)

◆ Take Photos: Choose Photo mode, press Shutter/Select Button "📸".

### 6 Video Recording Mode

◆ Looping Record: Record and save videos every 1/3/5min, and the latest video will overwrite the oldest video when Micro SD card is full.

◆ G-Sensor: Turn on G-Sensor during looping record. When the camera is shaken, the recorded video will be locked and saved into EVENT file, so that the video is unable to be overwritten automatically.

### 7 Photo Mode

◆ Self-Timer: Support self-timer at 3/5/10s setting.

◆ Photo Burst: Support photos to 3/5/10 frames per time, press-and-hold for continuous shot.


### 8 Car Mode

With the camera off and automotive charger connecting, when the car is started or a crash happened the camera will turn on and record automatically.


## Accessories | Accessories details



**Standard Backdoor**  
Provides waterproof protection to 131' (40m).

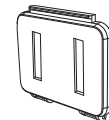


**Additional Skeleton Backdoor**  
Not waterproof, enables enhanced audio capture during activities.

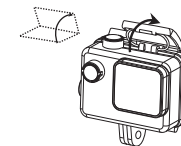


**Waterproof Housing**  
Open the cover from the front


## Accessories | Accessories Installing

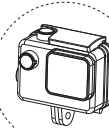


Flat Surface Installing

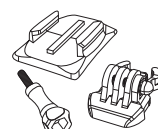

Curved Surface Installing

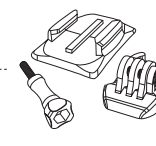


Other Installing -1

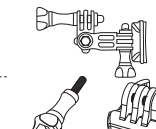


Other Installing -2

## Optional Mounts | The mounts in the dotted box are sold separately

Handle Monopod Usage

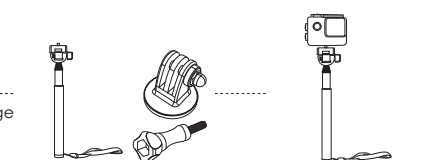

Chest Harness Usage

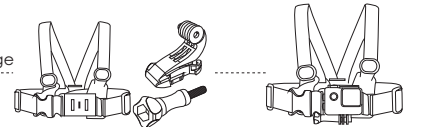

Pets Harness Usage

